


## DOUBLE HUNG REMOVING BALANCE COVER INSTRUCTIONS

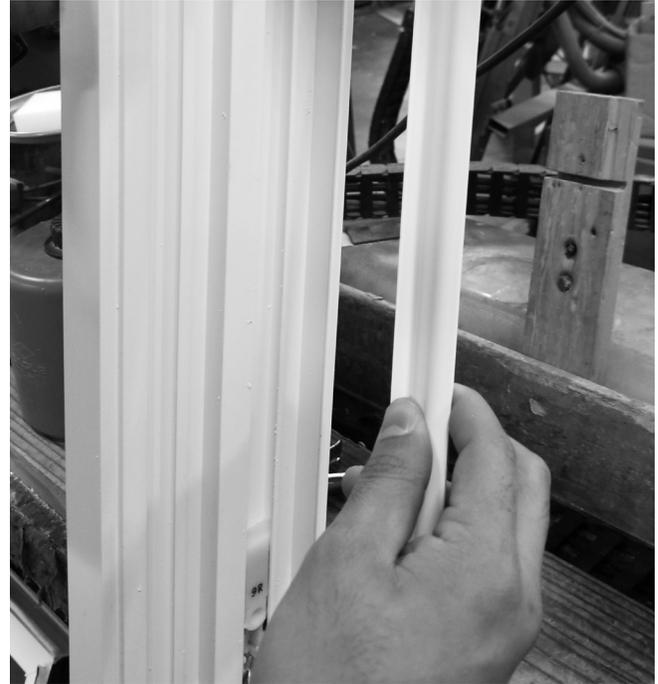

**STEP ONE:** To access wafer head jamb adjuster, lift lower exterior edge of balance cover side corners. Once started, it can be unlocked by sliding finger up jamb between cover and jamb.



**STEP TWO:** Once unlocked, remove covers from jambs. Installation screw holes and wafer head jamb adjuster screws are now exposed.



**STEP THREE:** Once all installation screws are driven, tighten wafer head jamb adjuster to bring jamb parallel with glass inserts. Repeat procedure on other jamb. Adjust as necessary.



**STEP FOUR:** To replace balance covers position covers over jambs with interior edge of covers in balance cavity. Relocate by folding lower exterior corners into place and sliding finger up joint.